

Making good use of your camcorder


Deleting movies and photos

You can free media space by deleting movies and photos from recording media.

Notes



- You cannot restore images once they are deleted. Save important movies and photos in advance.
- Do not remove the battery pack or the AC Adaptor from your camcorder while deleting the images. It may damage the recording media.
- Do not eject the memory card while deleting images from the memory card.
- You cannot delete protected movies and photos. Undo the protection of the movies and photos to delete them, before you try to delete them (p. 60).


Tips

- If you start playing back an image by selecting it from the Event Index screen, you can delete the image using  on the playback screen.
- To delete all images recorded in the recording media, and recover all the recordable space of the media, format the media (p. 58).
- Reduced-size images which enable you to view many images at the same time on an index screen are called “thumbnails.”


1 Press  (View Images) (p. 34).


2 Touch **MENU** (MENU) → [Edit/Copy] → [Delete].


3 To select and delete movies, touch [Multiple Images] → [**HD**: MOVIE]/[ PHOTO]/[ MOVIE/PHOTO].

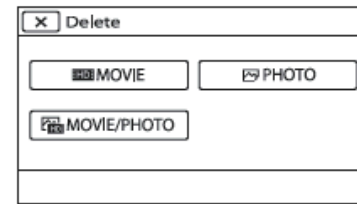

- When [**HD**: / **STD**: Setting] is set to [**STD**: STD Quality], **STD**: appears instead of **HD**:.

4 Touch and display the  mark on the movies or photos to be deleted.

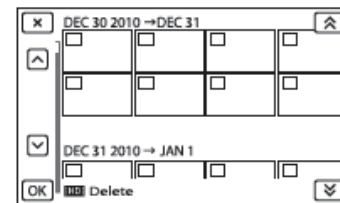




- Touch and hold the desired thumbnail so that you can confirm the image. Touch  to return to the previous screen.


5 Touch **OK** → **OK** → **OK**.

To delete all movies/photos in an event at one time

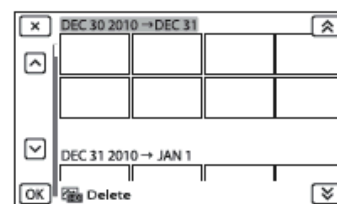① In step 3, touch [All In Event].



② Touch  /  to select the desired event, then touch **OK**.

- Touch and hold the desired thumbnail so that you can confirm the image. Touch  to return to the previous screen.

③ Touch **OK** → **OK**.