


Playback on the camcorder

In the default setting, movies and photos that are recorded on a memory card are played.


Tips

- To change the recording media, see page 26.
- The camcorder displays recorded images in an event automatically, based on the date and time.

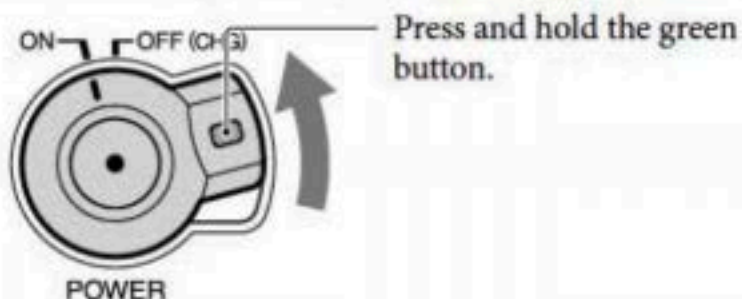

1 Slide the POWER switch to ON while pressing the green button.

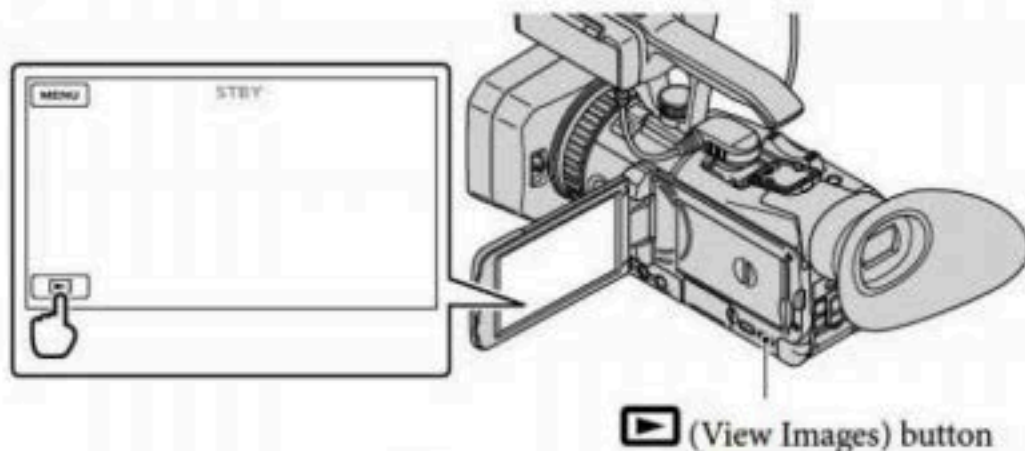


2 Press  (View Images).



The Event View screen appears after some seconds.

3 Touch  /  to select the desired event (**B**).

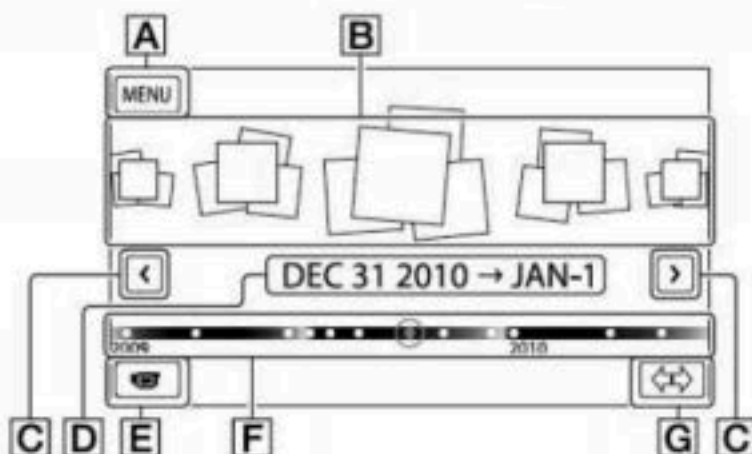

A To the MENU screen

B Events


- C** ◀/▶ : To the previous/next event
- D** Event name
- E** Change to the movie/photo recording mode
- F** Time-line bar
- G** Change Event Scale button

The Event Index screen appears when you touch the event that is displayed on the center.

- You can also choose an event by touching ◆ on the time-line bar.
- Touch ⇄ (Change Event Scale button **G**) on the bottom right of the screen so that you can change the time range of the time-line bar from one and a half years to three months, which changes the number of the events that can be displayed on the time-line bar.

4 Touch an image you want to view.

Touch **E** to select the image type to be displayed in the index from [MOVIE] (movies only), [PHOTO] (photos only), or [MOVIE/PHOTO] (movies and photos mixed).

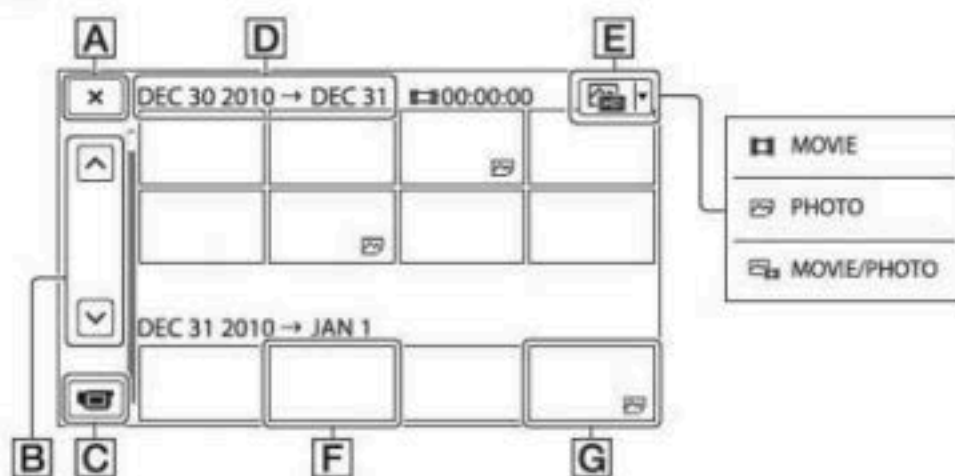


- A** To go back to the Event View screen
- B** ◀/▶ : Displays the previous/next page (Touching and holding the button scrolls the index screen.)
- C** Change to the movie/photo recording mode
- D** Event title
- E** Switch Image Type button
- F** Movie
- G** Photo (📷)

- ▶| appears with the movie or photo that was most recently played or recorded. If you touch the movie or photo with ▶|, you can continue playback from the previous time.

Operating the camcorder while playing a movie

You can use the functions shown in the figure below while the camcorder is playing a movie. The figure below will be displayed when you select [MOVIE/PHOTO] (the default setting) or [MOVIE] by touching the Switch Image Type button on the Event Index screen.

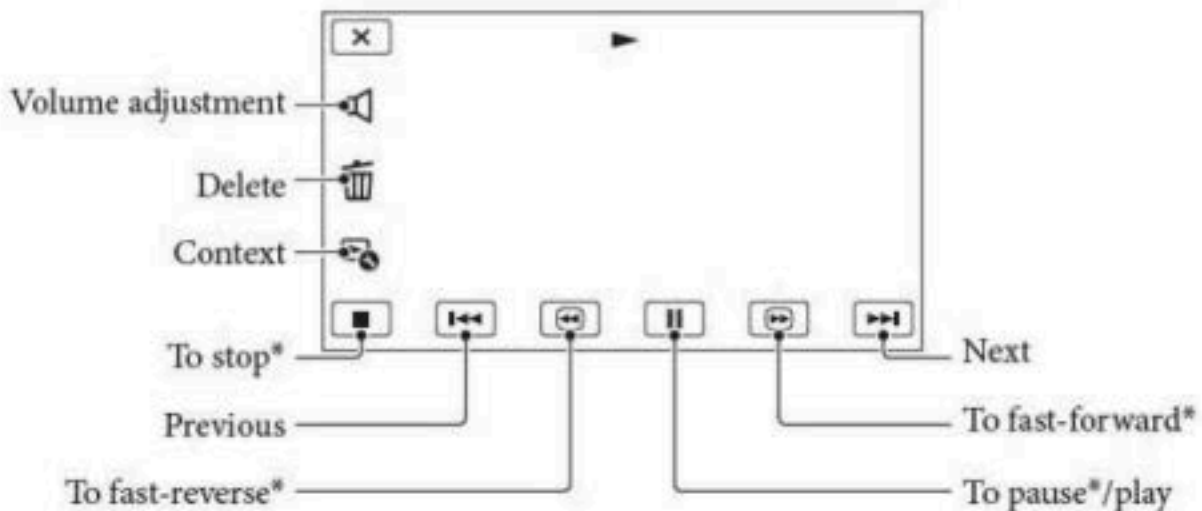

* These buttons can be used only when the camcorder is playing a movie.

Notes

You may not be able to play back the images with other devices than camcorder.

Tips

- Touching the button on the playback screen displays functions you can currently use, and allows you to use those functions easily.
- When playback from the selected image reaches the last image, the screen returns to the INDEX screen.
- Touch / during pause to play back movies slowly.
- As you repeat touching / during playback, movies are played as fast as about 5 times → about 10 times → about 30 times → about 60 times.
- The recording date, time, and shooting conditions, and coordinates are recorded automatically during recording. This information is not displayed during recording, but you can display it during playback by touching **MENU** (MENU) → [Setup] → (Playback Settings) → [Data Code] → a desired setting → **OK** → **OK**.

To adjust the sound volume of movies

While playing back movies, touch → adjust with / → **OK**.